# ECOPURE

Water Solved.®


# Model ECOP40

How to install, operate and maintain your Water Purifier

# PRODUCT AND WARRANTY REGISTRATION

Register your product online to validate and extend your warranty. See warranty page for details.






1-800-693-1138

or visit www.ecopure.com

When you call, please be prepared to provide the model number and date code of your product, found on the rating decal, located inside the cover.

System tested and certified by NSF International against NSF/ANSI Standards 42 and 53 for the performance claims listed on pages 12 and 13.

The ECOP40 system is certified by NSF International against NSF Protocol P231 for Microbiological Water Purifiers, based on the recommendations set forth in the U.S. EPA Guide Standard and Protocol for Testing Microbiological Water Purifiers (OPP Task Force Report, 1987).

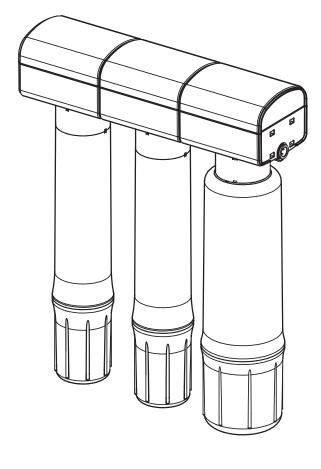



# **TABLE OF CONTENTS**

What the Water Purifier will Do       3         Before You Start       3         Specifications & Dimensions       3         Parts of the System       4         Materials & Tools Needed       4         Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11         Performance Data       12-13		Pa	age
Before You Start       3         Specifications & Dimensions       3         Parts of the System       4         Materials & Tools Needed       4         Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11	What the Water Purifier will Do		. 3
Specifications & Dimensions       3         Parts of the System       4         Materials & Tools Needed       4         Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Parts of the System       4         Materials & Tools Needed       4         Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Materials & Tools Needed       4         Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Typical Undersink Installation       4         Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Installation Instructions       5-7         Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Step A - Install Supply Water Fitting       5         Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Step B - Make Hole for Filtered Water Faucet       6         Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Step C - Install Faucet       6         Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Step D - Make Tubing Connections       7         Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines       7         Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11	·		
Filter Cartridges       8         Filter Cartridge Life       8         Filter Cartridge Replacement       8         Faucet Electronics & Battery Change       9         Troubleshooting the System       9         Exploded View & Parts List       10         Warranty       11			
Filter Cartridge Life			
Filter Cartridge Replacement			
Faucet Electronics & Battery Change			
Troubleshooting the System9Exploded View & Parts List10Warranty11	Filter Cartridge Replacement		. 8
Exploded View & Parts List    10      Warranty    11	Faucet Electronics & Battery Change		. 9
Exploded View & Parts List    10      Warranty    11	Troubleshooting the System		. 9
Warranty	Exploded View & Parts List	'	10
	·		

### What the Water Purifier will Do

The ECOP40 is a water purification treatment system. This system uses a triple filter configuration to remove undesirable elements in your water. These elements may include chlorine taste and odor, particulates, lead, virus, bacteria, cysts, and many organic compounds. At the same time, the system allows the minerals found in water to remain, for great tasting water.

The ECOP40 utilizes patented technology to ensure a safe water supply for the user. Replace all filters every 6 months or 550 gallons. The purifier technology is designed to stop flowing when its capability to protect the user has been exhausted. This one-of-a-kind failsafe technology ensures that the user will not be exposed to contaminated water.

**NOTE:** A performance data sheet is included listing what the system will reduce from the water supply. See the performance data sheet for individual contaminants and microbial reduction performance.


The drinking water system fits under the kitchen or bathroom sink. However, you can install it where it is most convenient. You need a COLD water supply pipe within a few feet (6 feet of tubing is included). You can purchase longer lengths of tubing if needed to reach more distant points. Be sure tubing is acceptable for use on potable water supplies.

### **Before You Start**

- ▼ Read all steps and guides carefully before installing and using your water purifier. Follow all steps exactly to correctly install. Reading this manual will also help you to get all the benefits from the water purifier.
- ▼ Do not use for the treatment of water that is visually contaminated (cloudy) or has an obvious contamination source, such as contamination by raw sewage.
- ▼ All plumbing should be done in accordance with local codes and requirements. In Massachusetts, plumbing code 248 CMR 3.00 and 10.00 shall be adhered to. Consult with your licensed plumber.
- ▼ The water purifier works on water pressures of 30 psi (minimum) to 100 psi (maximum). If your house water pressure is over the maximum, install a pressure reducing valve in the water supply pipe to the filter system.
- ▼ Do not install the water purifier outside, or in extreme hot or cold temperatures. Temperature of the water supply to the filter system must be between 40°F and 100°F. Do not install on hot water.

# **Specifications & Dimensions**

Supply Water Pressure Min Max.	30 - 100 psi (207 - 689 kPa)
Supply Water Temperature Min Max.	40 - 100 °F (4 - 38 °C)
Inlet - Outlet 3/8"	quick connect fittings and tubing included
Maximum Supply Water Iro Manganese & Hydrogen Su	

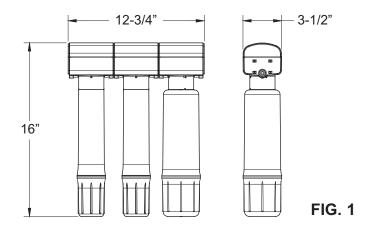

#### Questions? Call Toll Free 1-800-693-1138 or visit www.ecopure.com

When you call, please be prepared to provide the model, date code and serial number, found on the rating decal located inside the cover.

# **Parts of the System**

- Filter system assembly
- Water supply fitting
- Filtered water faucet for sink or countertop mounting
- Color coded 3/8" tubing to make all needed connections

### **Materials and Tools Needed**

**NOTE:** Gather the required tools before starting installation. Read and follow the instructions provided with any tools listed here.

- Slotted and Phillips screwdrivers
- Pliers and adjustable jaw wrench
- Tubing cutter
- Electric drill and 1-1/4" drill bit if mounting hole is needed for the faucet

**IMPORTANT:** To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures in porcelain or stainless steel.

# **Typical Undersink Installation**

Plan to install the water filtration system near the cold water supply pipe, under the kitchen and/or bathroom sink, to filter the cold drinking water. Refer to the following drawing.

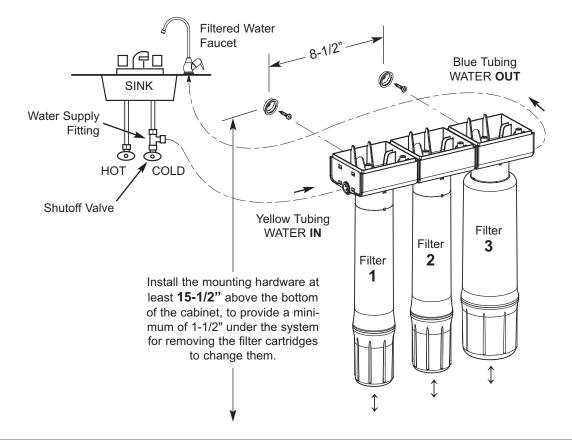


FIG. 2

# **Installation Instructions**

### Step A - Install Water Supply Fitting

Check and comply with local plumbing codes as you plan, then install a cold water supply fitting. The fitting must provide a leak-tight connection to the water filter 3/8" tubing. A typical connection using the included water supply fitting is shown in Figure 3A. An optional connection using standard plumbing fittings (not included) is shown in Figure 3B.


### **Included Water Supply Fitting**

- 1. Close the cold water shutoff valve (angle stop valve) that the water supply fitting will be installed on, and open faucet(s) to relieve pressure.
- 2. Disconnect the existing cold water line from the water shutoff valve.
- 3. Make sure that the water supply fitting's gasket is inside the female threaded portion of the fitting.
- **4**. Install the water supply fitting onto the cold water shutoff valve, where the existing cold water line was removed, and hand tighten. Be careful not to cross thread or overtighten.
- **5**. Connect the existing cold water line to the male threaded portion of the water supply fitting and hand tighten. Be careful not to cross thread or overtighten.

### Optional Pipe Fittings (compression type shown)

**NOTE:** Be sure to turn off the water supply and open a faucet to drain the pipe.

Complying with plumbing codes, install a fitting on the cold water pipe to adapt 3/8" OD tubing. A typical connection is shown in Figure 3B. If threaded fittings are used, be sure to use pipe joint compound or thread sealing tape on outside threads.

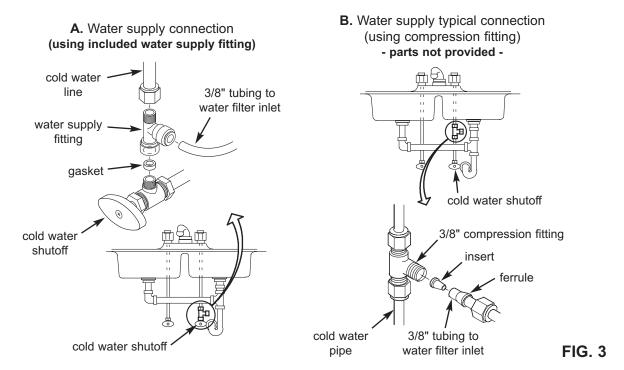

### Step B - Make Hole For Filtered Water Faucet


**IMPORTANT:** To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures in porcelain, stainless steel or granite. Special drill bits are made for this.

- **1**. Select one of the following places to install the faucet. Be sure there is room underneath so you can make the needed connections.
  - In an existing sink spray attachment hole.
  - Drill a hole in the sink top.
  - Drill a hole in the countertop next to the sink.
- 2. If drilling is needed make a 1-1/4" dia. (minimum) hole for the faucet.

# **Installation Instructions**

### Step C - Install Faucet

- **1**. Feed the 3/8" tubing that is attached to the faucet through the mounting hole. Slide the toggle bolts through the mounting hole. Tighten the screws to secure the base flat on the mounting surface. Do not overtighten.
- 2. Move the faucet down onto the base. Turn 1/4 clockwise to attach the faucet to the base.
- 3. Install battery in base. See "Battery Change" section for instructions.

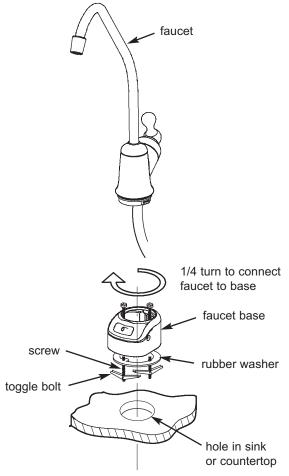

### Step D - Make Tubing Connections

NOTE: Remove protective foam plugs before connecting tubes (See Fig. 5). Discard foam plugs.

- **1**. Allowing some slack, measure and cut a length of 3/8" tubing to connect between the supply fitting and the filter system inlet (See Figure 2). Cut the ends of the tubing square.
- **2**. Insert tubing all the way into the supply fitting and inlet fitting. Pull on the tubing to be sure that it's held firmly in the fittings.
- **3**. Repeat steps 1 and 2 to connect tubing from the faucet to the filter system outlet (See Figure 2). Tubing Connection (all push-in fitting locations):

This system includes push-in fittings for quick tubing connections. If working with the fittings, do the following.

continued on the next page

FIG. 4


# **Installation Instructions**

continued from the previous page

#### **Connect Tubing:**

- **1**. Use a sharp cutter or knife to cut the end of tubing square.
- **2**. Inspect the end (about 1") of the tubing to be sure there are no nicks, scratches or other rough spots. If needed cut the tubing again.
- **3**. Push tubing through the collet and all the way into fitting. Full engagement is 3/4" length of tube into the fitting.

If tubing other than supplied with the system is used, be sure it is of high quality, exact size and roundness with a smooth surface.

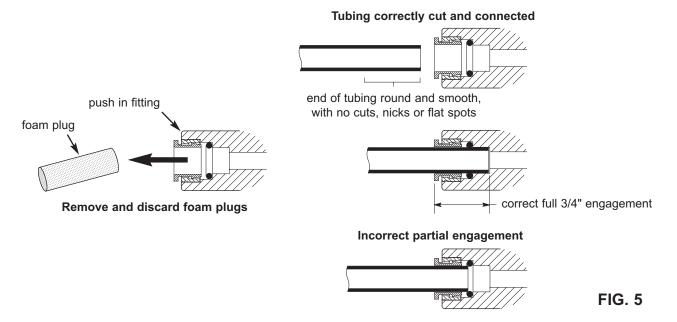

#### To Disconnect Tubing:

1. Push the collet inward and hold with a finger while pulling the tubing out.



### Step E - Turn On Water, Check for Leaks and Rinse Carbon Fines

- 1. Open the shutoff valve(s) that you closed at the beginning of this installation.
- **2**. Open the sink faucet and filtered water faucet to purge air from the system. When the water runs smooth, with no bubbles or spurting, close faucets and check installation for leaks.
- 3. Open the filtered water faucet and let water run for 10 minutes to rinse out carbon fines.

#### Questions? Call Toll Free 1-800-693-1138 or visit www.ecopure.com

When you call, please be prepared to provide the model, date code and serial number, found on the rating decal located inside the cover.

# **Filter Cartridges**

### Filter Cartridge Life

**Taste and Odor, and Purifying Cartridges:** Taste and odor, and purifying cartridges contain activated carbon. When new, open the filtered water faucet and allow fine, carbon particles to purge from the cartridges. Flush for 10 minutes. It is recommended to **replace filter cartridges every six months or 550 gallons** of use. There are several variables that determine how long a cartridge will last. These include:

- 1. How much water you use, and
- 2. How much sediment, taste and/or odor, or other unwanted substance, is in the water.

Use the following information as a guide. However, no matter which type of cartridge you are using, you will know it is time to replace them when you first notice the return of the unwanted sediment, taste and/or odor in your water, or when the flow diminishes or stops.

EcoPure Water Purifier system model ECOP40 with replacement element pack ECOWPF conforms to NSF/ANSI 42 and 53 for the specific performance claims as verified and substantiated by test data. The rated capacity for this system is 550 gallons (2,082 liters) at a rated service flow of 0.74 gallons per minute.

State of Wisconsin Required Statement: Do not use in Wisconsin with water that is microbiologically unsafe, or of unknown quality, without adequate point of entry (i.e. whole house) disinfection before this device.

Register for reminders to change filters at www.ecopure.com

### Filter Cartridge Replacement

- 1. Turn filter cartridge to the left to remove cartridges from the filter heads.
- 2. Dispose of the cartridges in a proper manner.
- 3. Install new cartridges. Turn cartridges to the right to re-attach to the filter heads.

**Taste and Odor, and Purifying Cartridges:** Taste and odor, and purifying cartridges contain activated carbon, a black powder. When new, open the filtered water faucet and allow fine, carbon particles to purge from the cartridges. Flush for 10 minutes.

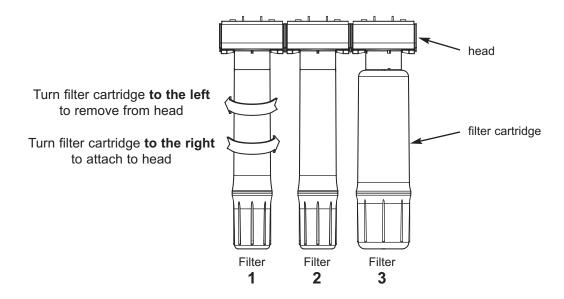


FIG. 7

### **Faucet Electronics**

### **Faucet Timer**

Inside the faucet base is a battery operated 6 month timer.

An amber LED indicator is also located in the front of the faucet base. This LED will flash continuously after 6 months have passed. This indicates that it is time to replace the battery and filters.


### **Battery Change**

To change the battery, complete the following steps.

- 1. Loosen the screw on the right side of the faucet base.
- **2**. Press the battery housing upwards from faucet base until it releases from the base.
- **3**. Replace the battery (CR 2032 or equivalent). Place battery into the holder with the positive (+) side facing the back of the holder.

**NOTE:** Recycle or properly dispose of the old battery.

- **4**. When the battery is first replaced the light in the base will flash six times and turn off. This indicates the battery is fully charged. After the six flashes the timer enters the 6 month time cycle. If it repeatedly flashes two times, the battery is weak and needs to be replaced.
- **5**. Re-install the battery housing and firmly tighten the mounting screw.

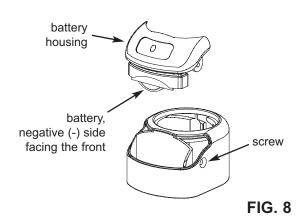


# **Troubleshooting the System**

Problem: No water or decreased water flow.		
Cause: Filter 1 is clogged.	Correction:	Replace the filter 1 cartridge.
Cause: Flow through the purifying filter will decrease and eventually clog when exposed to an excess of microbiological loading materials in the water. This failsafe feature reduces the chance of product use beyond its intended life, and will shut down the filter when it is exposed to contaminated water.	Correction:	Replace all filter cartridges.
Problem: Taste and/or Odor.		
Cause: Filter cartridges exhausted.	Correction:	Replace all filter cartridges.
Cause: System contaminated.	Correction:	Sanitize system. Call 1-800-693-1138 for instructions.
Problem: Faucet LED indicator light does not function after be	attery change	).
Cause: Battery dead.	Correction:	Replace with new battery.
Cause: Battery installed incorrectly.	Correction:	Install battery correctly.
Problem: Water leaks at push connect fittings.		
Cause: Tubing not pushed in all the way.	Correction:	Push tubing in all the way into fittings.
Cause: Tubing not cut square.	Correction:	Cut tubing square.
Cause: Tubing nicked.	Correction:	Remove nicked portion, reinsert tubing into fitting.
Cause: Outer tubing surface not smooth.	Correction:	Remove rough portion, reinsert tubing into fitting.

Need help troubleshooting? Call Toll Free 1-800-693-1138 or visit www.ecopure.com

# **Parts List**

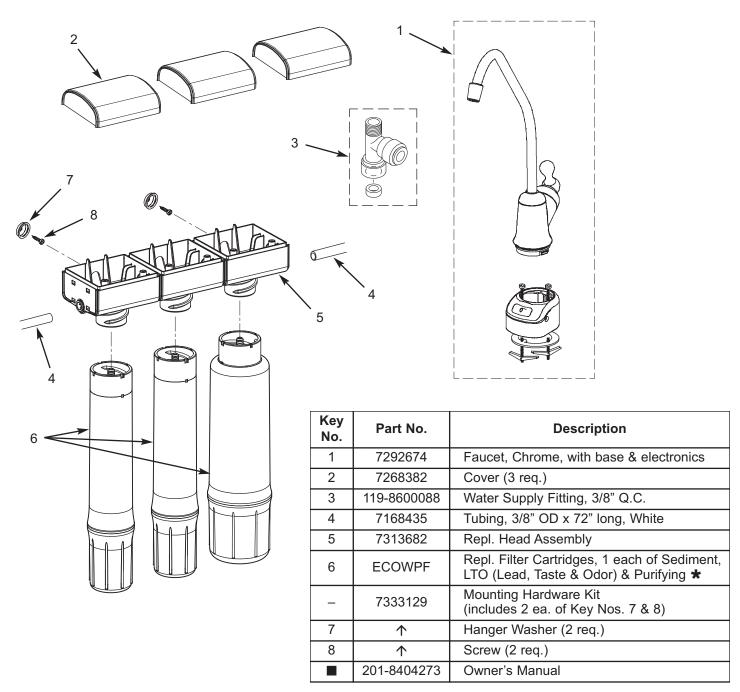

- ★ Please purchase replacement cartridges from the retailer where you bought your water purifier system.
- Not illustrated.

To order repair parts call toll free 1-800-693-1138.

Manufactured and warranted by Ecodyne Water Systems 1890 Woodlane Drive Woodbury, MN 55125

#### **EXTEND YOUR WARRANTY:**

### Register your EcoPure replacement filter purchases

You can turn your water purifier's one year factory warranty into a lifetime warranty by registering your purchases of EcoPure replacement filter cartridges. See "Lifetime Warranty" below for details.

#### WARRANTY

#### WATER PURIFIER - MODEL ECOP40

(not including filter cartridges)

Warrantor: Ecodyne Water Systems, 1890 Woodlane Drive, Woodbury, MN 55125

#### One Year Warranty:

Warrantor guarantees, to the original owner, that the Water Purifier (ECOP40), when installed and maintained in accordance with the instructions, will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase.

#### **Lifetime Warranty:**

Warrantor guarantees, to the original owner only, that the Water Purifier (ECOP40) will be free from defects in materials and workmanship for the lifetime of the owner, provided that:

- The system is installed and maintained in accordance with the instructions in the same home where it was originally installed.
- The owner replaces all three filters every six (6) months and registers their purchase of the EcoPure ECOWPF filter cartridge set on www.ecopure.com. Purchase of no more than two (2) ECOWPF filter sets in a 12 month period may be applied toward compliance with this warranty.

Failure to adhere to the above requirements from the date of purchase voids the lifetime warranty.

If, during such respective periods, a part proves, after inspection, to be defective, Warrantor will, at its sole option, either replace or repair the part without charge except normal shipping and installation charges. Labor to maintain the equipment is not part of the warranty. Filters, which are expendable, are not covered by the warranty.

TO OBTAIN WARRANTY PARTS, SIMPLY CALL 1-800-693-1138 for assistance. This warranty applies only while this product is in use in the United States or Canada.

#### **General Provisions**

The above warranties are effective provided the Water Purifier is operated at water pressures not exceeding 100 psi, and at water temperatures not exceeding 100°F; provided further that the Water Purifier is not subject to abuse, misuse, alteration, neglect, freezing, accident or negligence; and provided further that the Water Purifier is not damaged as the result of any unusual force of nature such as, but not limited to, flood, hurricane, tornado or earthquake.

Warrantor is excused if failure to perform its warranty obligations is the result of strikes, government regulation, materials shortages, or other circumstances beyond its control.

\*THERE ARE NO WARRANTIES ON THE WATER PURIFIER BEYOND THOSE SPECIFICALLY DESCRIBED ABOVE. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT THEY MIGHT EXTEND BEYOND THE ABOVE PERIODS. THE SOLE OBLIGATION OF WARRANTOR UNDER THESE WARRANTIES IS TO REPLACE OR REPAIR THE COMPONENT OR PART WHICH PROVES TO BE DEFECTIVE WITHIN THE SPECIFIED TIME PERIOD, AND WARRANTOR IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. NO WARRANTOR DEALER, AGENT, REPRESENTATIVE, OR OTHER PERSON IS AUTHORIZED TO EXTEND OR EXPAND THE WARRANTIES EXPRESSLY DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damage, so the limitations and exclusions in this warranty may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. This warranty applies to consumer-owned installations only.

# **Performance Data**



### **Model ECOP40 Water Purifier**

**IMPORTANT NOTICE:** Read this performance data and compare the capabilities of this unit with your actual water treatment needs. It is recommended that, before purchasing a water treatment unit, you have your water supply tested to determine

your actual water treatment needs. This filter system is designed to be used for the reduction of the performance claims listed below. Do not use for the treatment of water that is visually contaminated (cloudy) or has an obvious contamination source, such as contamination by raw sewage. This system is not intended to convert waste water or raw sewage into drinking water. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. While testing was performed under standard laboratory conditions, actual performance of this system may vary based on local water conditions. Some or all of the contaminants reduced by this unit may not be in your water supply. See elsewhere in this owner's manual for further instructions on filter cartridge replacement, system installation, operating procedures, and warranty. The maintenance instructions must be followed for the product to perform as indicated below.

#### **General Information**

This system conforms to NSF Protocol P231 for Microbiological Water Purifiers. This filter improves the taste and odor and reduces many chemical contaminants in drinking water. The faucet indicator monitors the length of time the filter has been installed and will flash amber continuously; indicating the filters and battery need to be replaced. This system has been tested according to NSF/ANSI 42 and 53 for reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42 and 53. The testing was performed using spiked tap water at a flow rate of 0.74 gpm (2.8 L/min.), pH of 7.5 ± 0.5, pressure of 60 psig, and temperature of 68 ±5°F.

#### **Installation Requirements**

Pressure Range	30-100 psig (207-689 kPa)
Temperature Range	40-100°F (5-38°C)
Service Flow Rate	0.74 gpm (2.8 L/min.)
Service Life	. 550 Gallons (2,082 Liters)

#### **Maintenance**

Cartridges should be replaced every 550 gallons or six months, whichever comes first. Replacement filter prices will vary. Current pricing of replacement filter pack ECOWPF is approximately \$70.00 to \$100.00.

PERFORMANCE CLAIMS							
Contaminant	NSF Required Influent Level (μg/L) <sup>2</sup>	NSF Max. Per- missible Effluent Level (μg/L) <sup>2</sup>	Average Influent Level (μg/L) <sup>2</sup>	Avg. / Max. Effluent (μg/L) <sup>2</sup>	Avg. / Min. Percent Reduction	EPA MCL <sup>1</sup> (μg/L) <sup>2</sup>	
Lead @ pH 6.5	150 ±10%	10	160	1.1 / 5.2	99.3 / 96.8	15	
Lead @ pH 8.5	150 ±10%	10	150	1.2 / 3.5	99.2 / 97.7	15	
Substance							
Chlorine Taste & Odor	2,000 ±10%	50% <sup>3</sup>	1,900	50 / 60	97.4 / 96.9	None <sup>4</sup>	
Particulate, Class I (0.5 to <1 micron)	10,000 particles/mL <sup>5</sup>	85% <sup>3</sup>	6,800,000 particles/mL <sup>5</sup>	10,200 / 18,000 particles / mL <sup>5</sup>	99.9 / 99.6	None <sup>4</sup>	
VOC Reduction <sup>6</sup>							
Chloroform	300 ±10%	95%	330	1.9 / 11	98.0 / 96.7	15	

- <sup>1</sup> Environmental Protection Agency Maximum Contaminant Level, as required under the Safe Drinking Water Act.
- <sup>2</sup> Micrograms per Liter, which is equivalent to parts per billion (PPB).
- <sup>3</sup> NSF minimum percent reduction requirement. Acceptance level for this substance is based on percent reduction, rather than maximum effluent concentration.
- <sup>4</sup> The EPA has not determined an MCL for this chemical.
- <sup>5</sup> Particulate Class I reported in particles per milliliter.
- <sup>6</sup> Chloroform was used as a surrogate for the reduction of chemicals specified in the Organic Chemicals Reduced by Chloroform Surrogate Testing table.

Cyst, virus and bacteria reduction tested by BioVir Labs, in accordance with the U.S. EPA test protocol.

Substance	Log Reduction	% Reduction
Cyst	3.5	99.95%
Virus	4	99.99%
Bacteria	6	99.9999%



System tested and certified by NSF International against NSF/ANSI Standards 42 and 53 for the performance claims listed on pages 12 and 13.

The ECOP40 system is certified by NSF International against NSF Protocol P231 for Microbiological Water Purifiers, based on the recommendations set forth in the U.S. EPA Guide Standard and Protocol for Testing Microbiological Water Purifiers (OPP Task Force Report, 1987).

# **Performance Data**

ORGANIC CHEMICALS REDUCED BY CHLOROFORM SURROGATE TESTING								
Contaminant	Avg. <sup>1</sup> Influent (µg/L) <sup>3</sup>	Maximum Effluent (μg/L) <sup>3</sup>	Percent Removal	EPA MCL <sup>2</sup> (µg/L) <sup>3</sup>		Contaminant	Avg. <sup>1</sup> Influent (µg/L) <sup>3</sup>	Maximun Effluent (μg/L) <sup>3</sup>
Alachlor	50	1.04	>98	2.0	Ī	Haloketones (HK):		
Atrazine	100	3.04	>97	3.0	Ì	1,1-Dichloro-2-Propanone	7.2	0.1 <sup>5</sup>
Benzene	81	1.04	99	5.0	Ī	1,1,1-Trichloro-2-Propanone	8.2 <sup>6</sup>	0.3 <sup>5</sup>
Carbofuran	190	1.0 <sup>4</sup>	>99	40	Ì	Heptachlor	25	0.014
Carbon Tetrachloride	78	1.8 <sup>5</sup>	98	5.0	Ī	Heptachlor Epoxide	10.7 <sup>7</sup>	0.2 <sup>7</sup>
Chlorobenzene	77	1.04	99	100	Ī	Hexachlorobutadiene	44	1.04
Chloropicrin	15	0.25	99	NA	Ī	Hexachlorocyclopentadinene	60	0.0024
2,4-D	110	1.7 <sup>5</sup>	98	70	Ī	Lindane	55	0.014
Dibromochloropropane	52	0.024	>99	0.2	Ī	Methoxychlor	50	0.14
(DBCP)					Ī	Pentachlorophenol	96	1.0 <sup>4</sup>
o-Dichlorobenzene	80	1.0 <sup>4</sup>	99	600	İ	Simazine	120	4.04
p-Dichlorobenzene	40	1.0 <sup>4</sup>	98	75	İ	Styrene	150	0.5 <sup>4</sup>
1,2-Dichloroethane	88	4.8 <sup>6</sup>	95 <sup>6</sup>	5.0	İ	1,1,2,2-Tetrachloroethane	81	1.04
1,1-Dichloroethylene	83	1.0 <sup>4</sup>	99	7.0	Ì	Tetrachloroethylene	81	1.04
cis-1,2-Dichloroethylene	170	0.5 <sup>4</sup>	>99	70	İ	Toluene	78	1.04
trans-1,2-Dichloroethylene	86	1.0 <sup>4</sup>	99	100	İ	2,4,5-TP (silvex)	270	1.6 <sup>4</sup>
1-2-Dichloropropane	80	1.0 <sup>4</sup>	99	5.0	İ	Tribromoacetic acid	42	1.04
cis-1,3-Dichloropropylene	79	1.04	99	NA	İ	1,2,4-Trichlorobenzene	160	0.54
Dinosorb	170	0.2 <sup>5</sup>	99	7.0	İ	1,1,1-Trichloroethane	84	4.6 <sup>5</sup>
Endrin	53	0.59 <sup>5</sup>	99	2.0	İ	1,1,2-Trichloroethane	150	0.54
Ethylbenzene	88	1.04	99	700	İ	Trichloroethylene	180	1.04
Ethylene Dibromide (EDB)	44	0.024	>99	0.05	İ	Trihalomethanes (includes):	300	15
Haloacetonitriles (HAN):				NA	İ	Chloroform (surrogate chemical)		
Bromochloroacetonitrile	22	0.5 <sup>5</sup>	98	NA	Ì	Bromoform		
Dibromoacetonitrile	24	0.6 <sup>5</sup>	98	NA		Bromodichloromethane		
Dichloroacetonitrile	9.6	0.25	98	NA		Chlorodibromomethane		
Trichloroacetonitrile	15	0.3 <sup>5</sup>	98	NA	Ì	Xylenes (total)	70	1.04

Contaminant	Avg. <sup>1</sup> Influent (µg/L) <sup>3</sup>	Maximum Effluent (μg/L) <sup>3</sup>	Percent Removal	EPA MCL <sup>2</sup> (µg/L) <sup>3</sup>
Haloketones (HK):				NA
1,1-Dichloro-2-Propanone	7.2	0.1 <sup>5</sup>	99	NA
1,1,1-Trichloro-2-Propanone	8.2 <sup>6</sup>	0.3 <sup>5</sup>	96	NA
Heptachlor	25	0.014	>99	0.4
Heptachlor Epoxide	10.7 <sup>7</sup>	0.2 <sup>7</sup>	98	0.2
Hexachlorobutadiene	44	1.04	98	NA
Hexachlorocyclopentadinene	60	0.002 <sup>4</sup>	>99	50
Lindane	55	0.014	>99	0.2
Methoxychlor	50	0.14	>99	40
Pentachlorophenol	96	1.04	99	1.0
Simazine	120	4.04	97	4.0
Styrene	150	0.5 <sup>4</sup>	>99	100
1,1,2,2-Tetrachloroethane	81	1.04	99	NA
Tetrachloroethylene	81	1.04	99	5.0
Toluene	78	1.04	99	1,000
2,4,5-TP (silvex)	270	1.6 <sup>4</sup>	99	50
Tribromoacetic acid	42	1.04	98	NA
1,2,4-Trichlorobenzene	160	0.5 <sup>4</sup>	>99	70
1,1,1-Trichloroethane	84	4.6 <sup>5</sup>	95	200
1,1,2-Trichloroethane	150	0.5 <sup>4</sup>	>99	5.0
Trichloroethylene	180	1.0 <sup>4</sup>	>99	5.0
Trihalomethanes (includes):	300	15	95	80
Chloroform (surrogate chemical)				
Bromoform				
Bromodichloromethane				
Chlorodibromomethane				
Xylenes (total)	70	1.04	99	10,000

<sup>&</sup>lt;sup>1</sup> Influent challenge levels are average influent concentrations determined in surrogate qualification testing.

<sup>&</sup>lt;sup>7</sup> The surrogate test results for Heptachlor Epoxide demonstrated a 98% reduction. These data were used to calculate an upper occurrence concentration, which would produce a maximum product water level at the MCL.



### FOR IOWA USE ONLY

All sales in lowa require the following signature before consummation of sale. These signatures must be retained by seller/renter for 2 years minimum.

Buyer/Renter	Date	
Seller	Date	
Seller's Address		
Seller's Phone No.		

**Product: EcoPure Model ECOP40 Water Purifier** 

<sup>&</sup>lt;sup>2</sup> Environmental Protection Agency Maximum Contaminant Level, as required under the Safe Drinking Water Act.

<sup>&</sup>lt;sup>3</sup> Micrograms per Liter, which is equivalent to parts per billion (PPB).

<sup>&</sup>lt;sup>4</sup> Maximum product water level was not observed, but was set at the detection limit of analysis.

<sup>&</sup>lt;sup>5</sup> Maximum product water level is set at a value determined in surrogate qualification testing.

<sup>&</sup>lt;sup>6</sup> Chemical reduction percent and maximum product water level calculated at chloroform 95% breakthrough point, as determined in surrogate qualification testing.